


LE-37F

3.5 inch Motherboard

User's Manual

Edition 2.0
2018/11/27

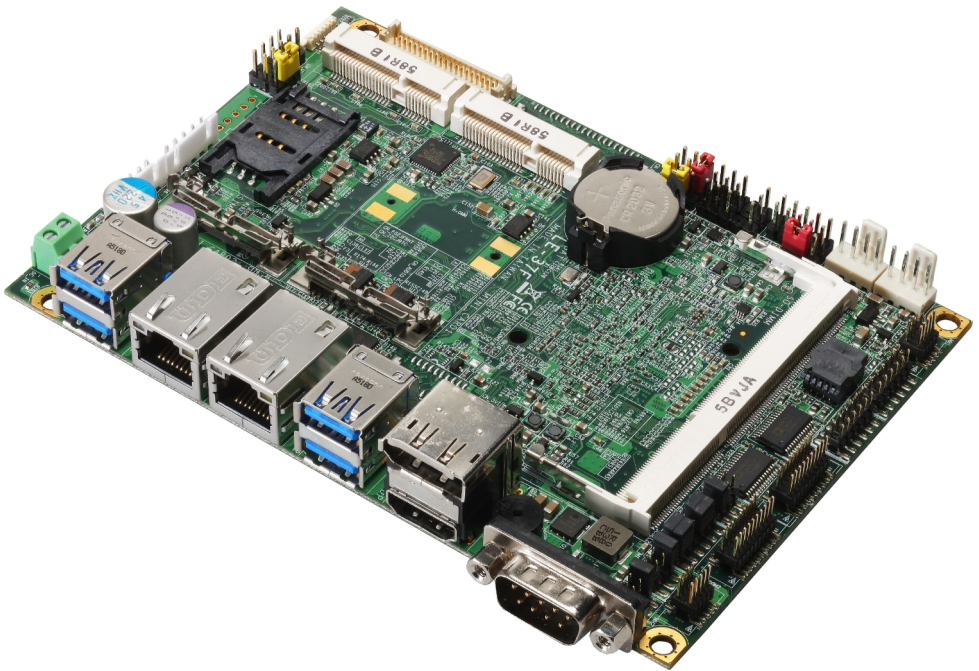

Copyright

Copyright 2016, all rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.

This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.

All trademarks and/or registered trademarks contains in this document are property of their respective owners.

Disclaimer

The company shall not be liable for any incidental or consequential damages resulting from the performance or use of this product.

The company does not issue a warranty of any kind, express or implied, including without limitation implied warranties of merchantability or fitness for a particular purpose.

The company has the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes.


Trademark

All trademarks are the property of their respective holders.

Any questions please visit our website at <http://www.commell.com.tw>

Packing List:

Please check the package content before you starting using the board.

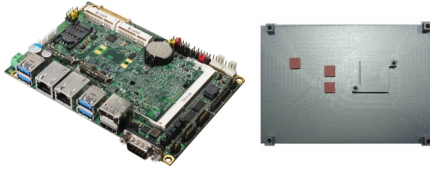

1 x LE-37F Motherboard
(include heat spreader)



1 x SATA CABLE
(OALSATA3-H10-L35 / 1040523)



1 x PS/2 Keyboard & Mouse cable
(OALPS2/KM / 1040131)



1 xDC Input Power Cable
(OALDC-B / 1040513)



1 x Audio cable
(OALPJ-HDUNB / 1040123)




1 x COM Cable
(OALES-BKU1NB / 1040086)




1 x SATA Power Cable
(OALSATA15-2PJ / 1040613)

Optional:



1 x Dual COM cable
(OALES-BKU2NB / 1040090)



1 xUSB2.0 cable
(OALUSBA-3 / 1040173)



1 x DDR3L SO-DIMM
(DSDM4GB-DDR3L-1600-SO-1.35V / 1140091)
(DSDM8GB-DDR3L-1600-SO-1.35V / 1140092)

Printed Matters:

Driver CD x 1 (Including User's Manual)

Index

| | |
|--|-----------|
| Chapter 1 <Introduction> | 4 |
| 1.1 <Product Overview> | 4 |
| 1.2 <Product Specification> | 5 |
| 1.3 <Mechanical Drawing> | 6 |
| 1.4 <Block Diagram> | 8 |
| Chapter 2 <Hardware setup> | 9 |
| 2.1 <Connector Location and Reference> | 9 |
| 2.1.1 <Internal connectors list> | 10 |
| 2.1.2 <External connectors list> | 10 |
| 2.2 <Jumper Location and Reference> | 11 |
| 2.2.1 <Jumper list> | 11 |
| 2.2.2 <Clear CMOS and Power on type selection> | 11 |
| 2.3 <Installing the Memory> | 12 |
| 2.4 <I/O interface> | 13 |
| 2.4.1 <Serial ATA interface> | 13 |
| 2.4.2 <Ethernet interface> | 13 |
| 2.4.3 <Display interface> | 13 |
| 2.4.4 <Serial Port interface> | 16 |
| 2.4.5 <USB interface> | 18 |
| 2.4.6 <Audio interface> | 18 |
| 2.4.7 <Expansion slot> | 19 |
| 2.4.8 <Front panel switch and indicator> | 20 |
| 2.4.9 <GPIO ,SMBUS and Other Interface> | 21 |
| 2.5 <Power supply> | 23 |
| 2.5.1 <Power input> | 23 |
| 2.5.2 <Power output> | 23 |
| Appendix A <Flash BIOS> | 24 |
| A.1 BIOS Auto Flash Tool | 24 |
| A.2 Flash Method | 24 |
| Appendix B <LCD Panel Type select> | 26 |
| Appendix C <Programmable Watch Dog Timer> | 27 |
| Appendix D <Programmable GPIO > | 28 |
| Appendix E <Setup ADP-3355> | 29 |
| Contact information | 29 |

Chapter 1 <Introduction>

1.1 <Product Overview>

LE-37F is 3.5 inch Motherboard which is design based on Intel® Pentium® Processor N3000 Series Processor(Braswell SoC), delivering outstanding compute, graphical, and media performance while operating in an extended range of thermal conditions. The SoC bases on the Silvermont microarchitecture, utilizing Intel's industry-leading 14nm process technology with 3-D Tri-Gate transistors, which deliver significant improvements in computational performance and energy efficiency.

New features for Intel® Pentium® N3000 Series Processor

The Intel® Pentium® N3000 Series Processor has a lower TDP 6W, it provides new HD Graphics to support triple display, 4K resolution, maximum memory size is up to 8GB of DDR3L, and more enhanced security that is suitable for a variety of intelligent systems the ideal choice.

All in One multimedia solution

The board provides high performance onboard graphics, 18/24-bit single/dual channel LVDS interface, DisplayPort, HDMI, and High Definition Audio, to meet the very requirement of the multimedia application.

Flexible Expansion Interface

The board provides two MiniPCIe and Minicard1 support mSATA.

Braswell remove EHCI, all USB ports are xHCI

When you install Windows7 with USB device(CDROM, Keyboard, Mouse...), Windows7 can not identify your usb device. You can use SATA CD-ROM and PS/2 to install Windows7.

1.2 <Product Specification>

System

| | |
|-----------------|---|
| Processor | Intel® Braswell Series Processor N3710/X5-E8000, FCBGA1170 package |
| Chipset | Braswell SoC |
| Memory | 1 x DDR3L DIMM 1600 MHz up to 8GB, Support Non-ECC, unbuffered memory only |
| Watchdog Timer | Generates a system reset with internal timer for 1min/s ~ 255min/s |
| Real Time Clock | Chipset integrated RTC with onboard lithium battery |
| Expansion | 2 x MiniPCIe (Minicard1 support mSATA) 1 x Sim slot |

Graphics

| | |
|-------------------|---|
| Chipset | Intel® HD Graphics |
| Display Interface | 1 x LVDS, 1 x HDMI, 1 x DisplayPort/VGA(Optional) |

LAN

| | |
|------|--------------------------------|
| Chip | 2 x Intel® I210-AT Gigabit LAN |
|------|--------------------------------|


I/O


| | |
|--------------|--|
| Serial ATA | 2 x SATA3 (CN_SATA2 cannot use when Minicard1 change to mSATA) |
| Audio | Realtek ALC262 HD Audio |
| Internal I/O | 2 x SATA3, 4 x RS232, 2 x USB2.0, 1 x LPC 1 x GPIO , 1 x PS/2, 1 x SMBUS, 1 x LVDS, 1 x LCD inverter, 1 x RS232/422/485, 1 x Audio 1 x VGA(Optional) |
| Rear I/O | 4 x USB3.0, 2 x LAN, 1 x HDMI, 1 x DisplayPort (Optional), 1 x RS232. |

Mechanical & Environmental


| | |
|-------------------|--|
| Power Requirement | DC 6~30V |
| Size & Thickness | 146mm x 101mm (L x W), 1.6mm |
| Temperature | Operating within 0°C~60°C (32°F~140°F) Storage within -20°C~80°C (-4°F~176°F) |
| Relative Humidity | 10%~90%, non-condensing |

1.3 <Mechanical Drawing>

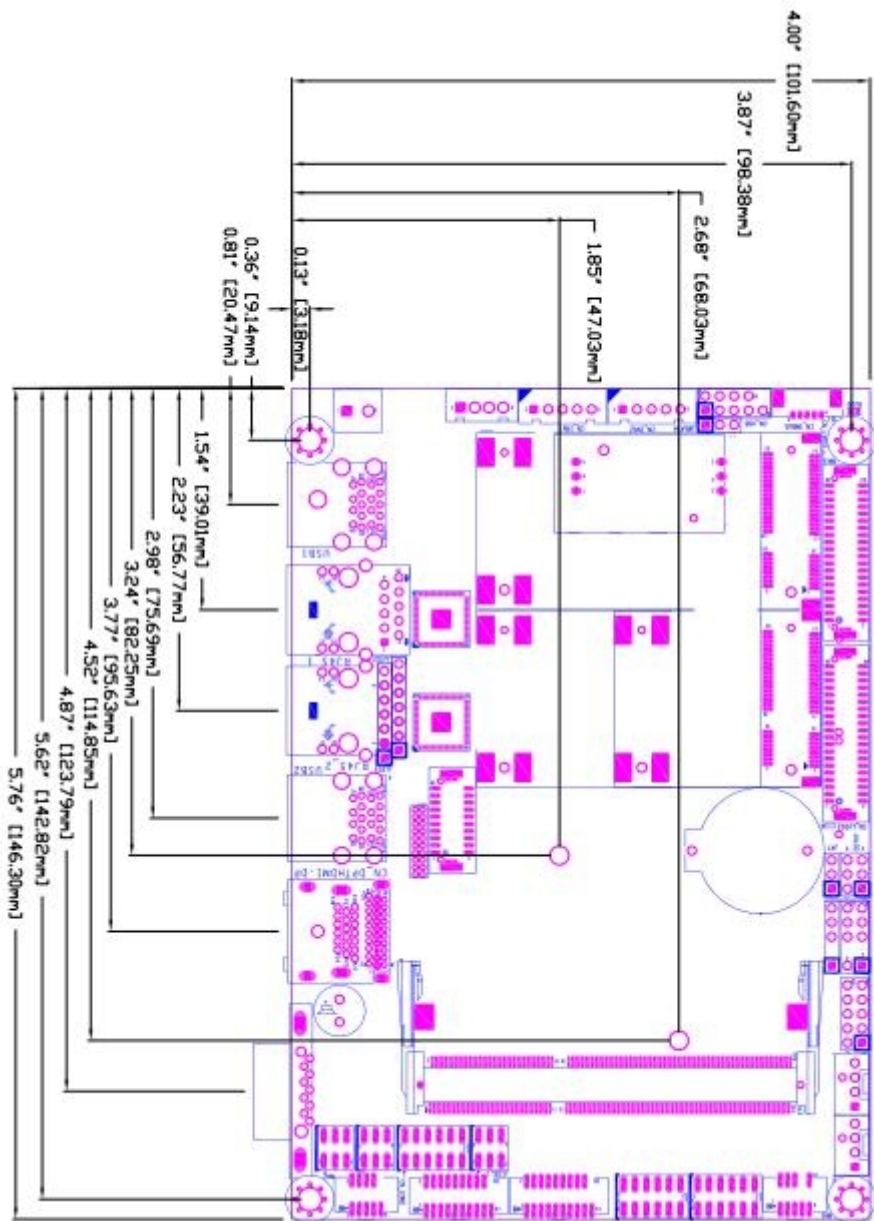

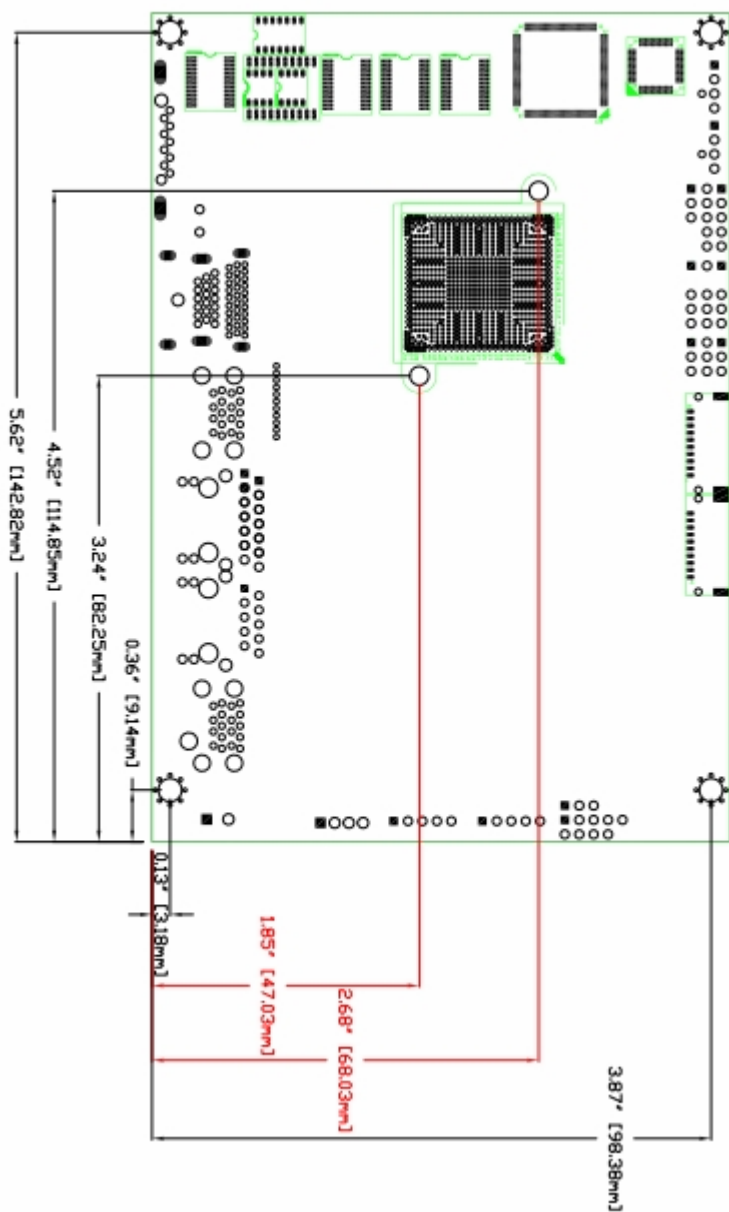



1.4 <Block Diagram>

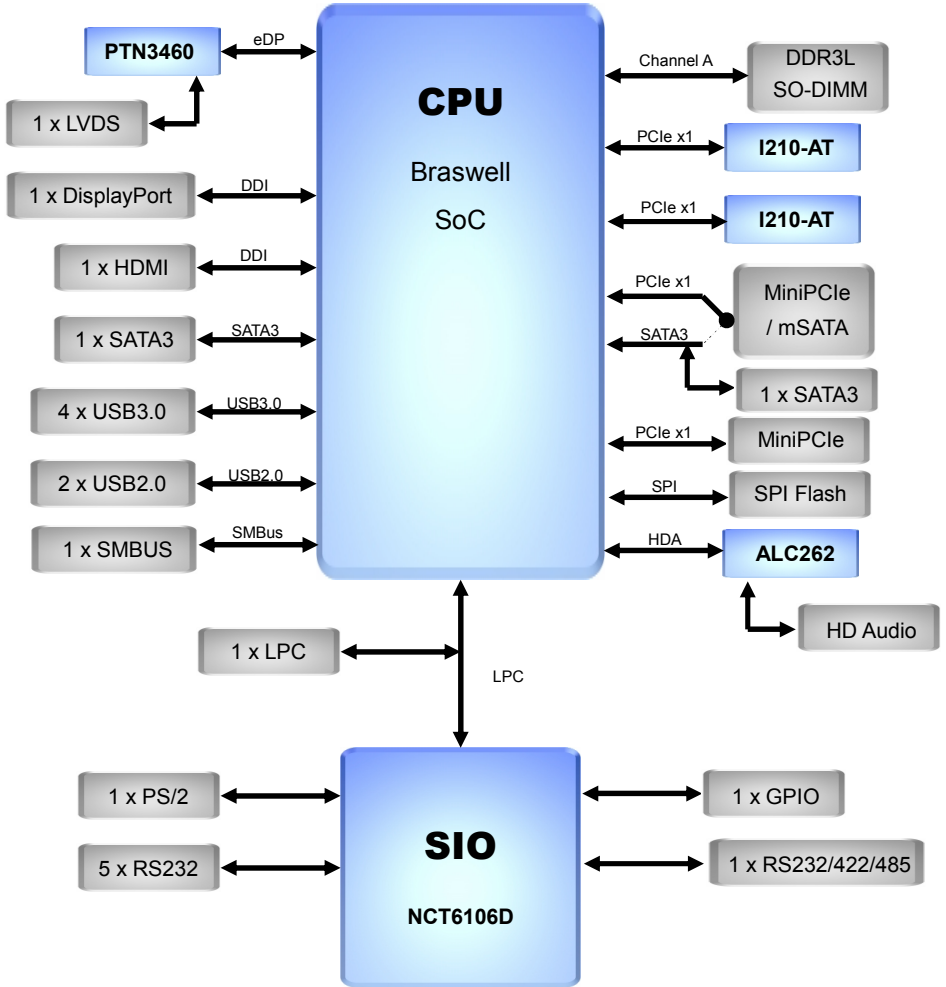

Chapter 2 <Hardware setup>

2.1 <Connector Location and Reference>

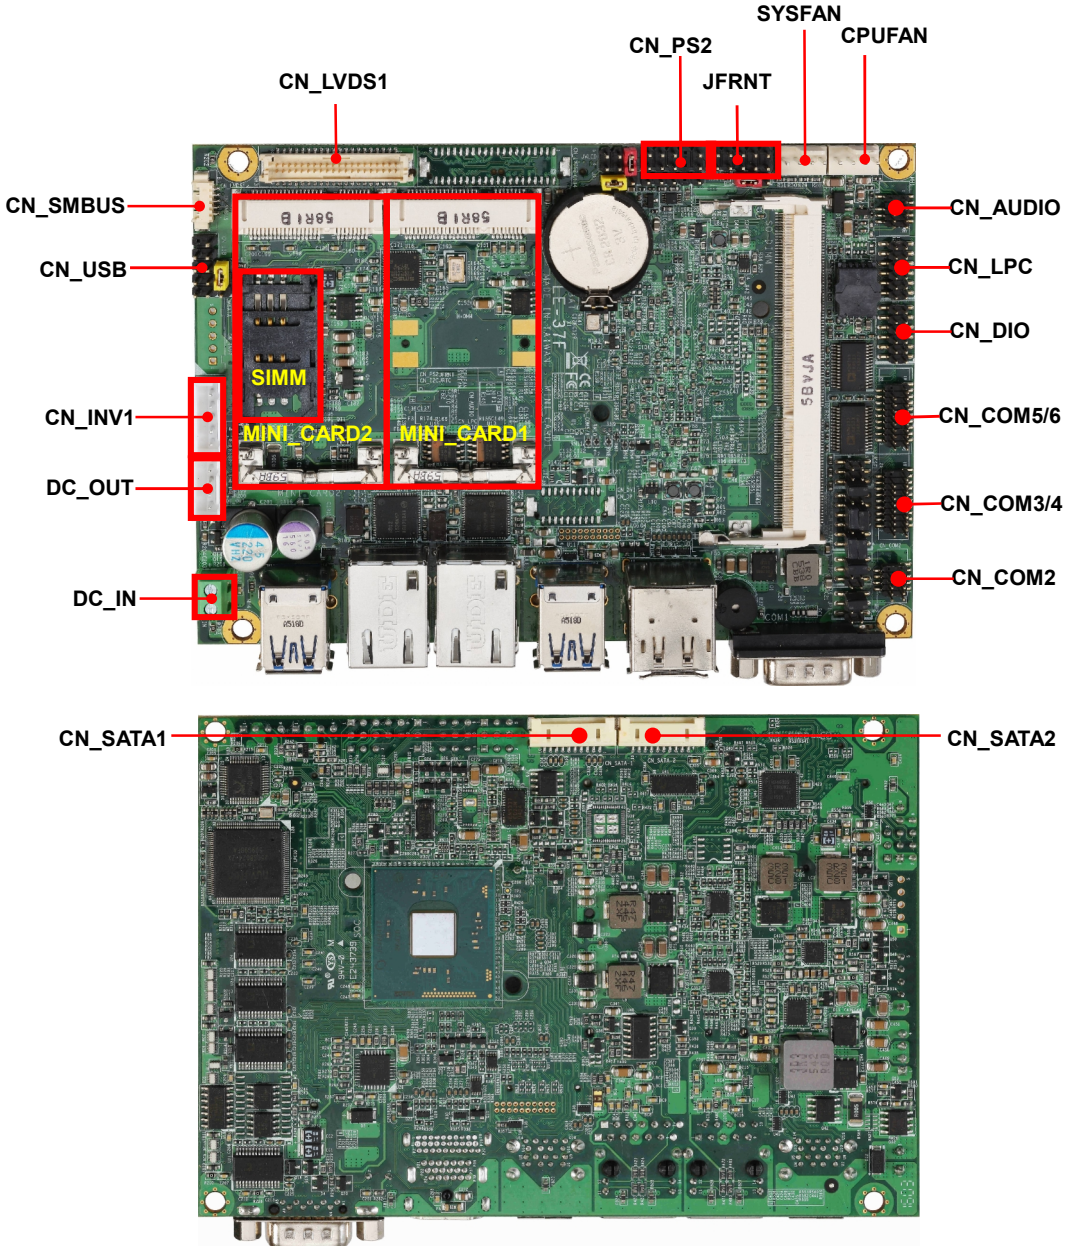

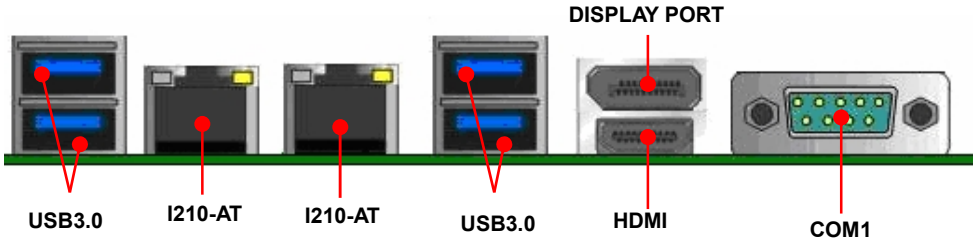


2.1.1 <Internal connectors list>

| Connector | Function |
|----------------|---|
| SO-DIMM | 204-pin DDR3L SO-DIMM slot |
| CN_SATA-1/2 | 10-pin Serial ATA3 connector |
| CN_AUDIO | 5 x 2-pin audio pin header |
| CN_LPC | 6 x 2-pin LPC pin header |
| CN_DIO | 6 x 2-pin digital I/O connector |
| CN_LVDS1 | 20 x 2-pin LVDS connector |
| CN_INV1 | 5-pin LCD inverter connector |
| CN_SMBUS | 5-pin SMBus connector |
| CN_COM2 | 9-pin RS232/485/422 connector |
| CN_COM 3/4 5/6 | 19-pin RS232 connector |
| CN_USB | 5 x 2-pin USB2.0 pin header |
| CN_PS2 | 5 x 2-pin PS/2 pin header |
| CPUFAN | 4-pin CPU fan connector |
| SYSFAN | 4-pin system fan connector |
| JFRNT | 5 x 2-pin front panel switch/indicator pin header |
| MINI_CARD1/2 | 52-pin MiniPCIe card slot |
| SIMM | 6-pin slot |
| DC_OUT | 4-pin SATA Power connector |
| DC_IN | 2-pin power input Terminal Block |

2.1.2 <External connectors list>

| Connector | Function |
|-------------|---------------------------|
| DisplayPort | DisplayPort connector |
| HDMI | HDMI connector |
| USB1/2 | 4 x USB3.0 connector |
| RJ45_1/2 | RJ45 LAN connector |
| COM1 | DB9 Serial port connector |

2.2 <Jumper Location and Reference>

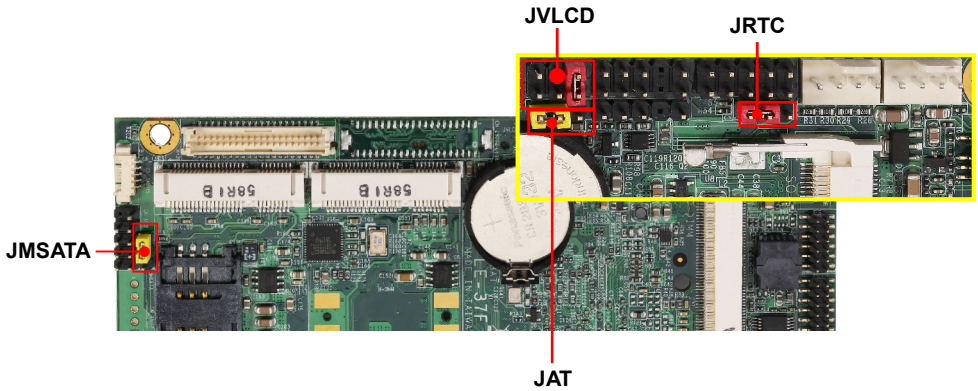

2.2.1 <Jumper list>

| Jumper | Function |
|--------|---------------------------|
| JAT | Power mode select |
| JRTC | CMOS Normal/Clear Setting |
| JVLCD | Panel Voltage Setting |
| JMSATA | MiniCard mSATA Setting |

2.2.2 <Clear CMOS and Power on type selection>


JRTC: Clear CMOS data jumper

| Jumper settings | Function |
|-----------------|------------------|
| 1-2 | Clear CMOS |
| 2-3 | Normal (Default) |



JAT: AT/ATX mode select jumper


| Jumper settings | Function |
|-----------------|--------------------|
| 1-2 | AT mode |
| 2-3 | ATX mode (Default) |

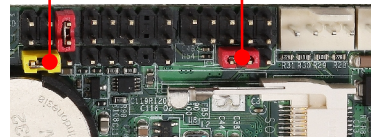


2.3 <Installing the Memory>

In the process, the board must be powered off.

1. Put the memory tilt into the slot. Note the Memory notch key aligned slot key.
2. Then press down till lock into the mounting notch.

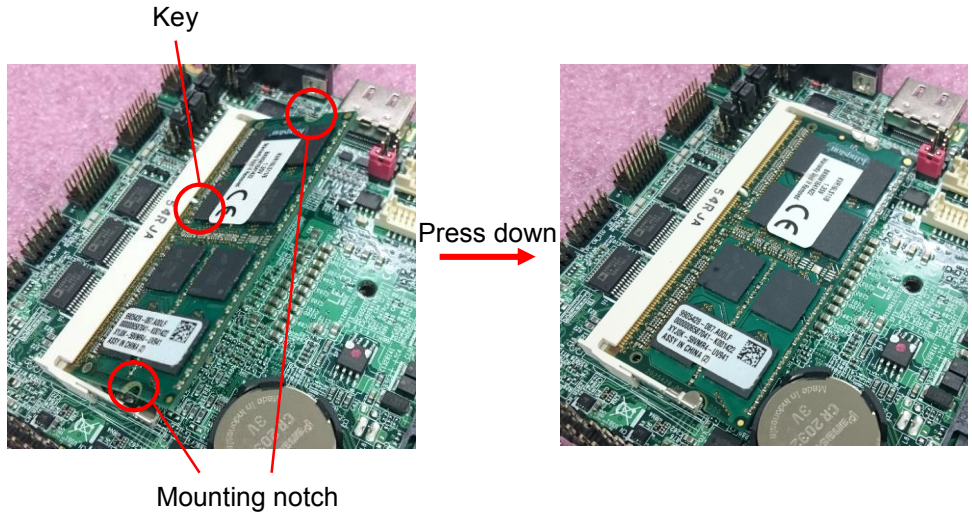

3. To remove the memory, push outward on both sides of the latch.

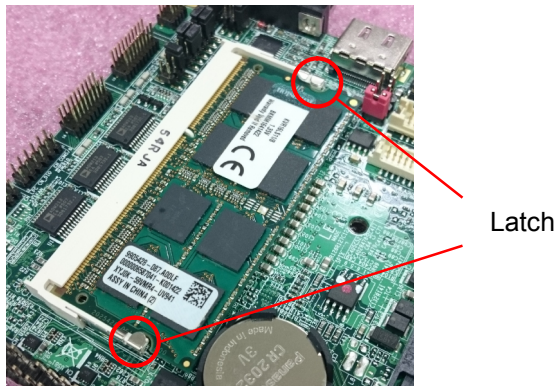


2.4 <I/O interface>


2.4.1 <Serial ATA interface>

CN_SATA: SATA3 10-pin connector

| Pin | Signal |
|-----|--------|
| 1 | GND |
| 2 | TX+ |
| 3 | TX- |
| 4 | GND |
| 5 | NC |
| 6 | NC |
| 7 | GND |
| 8 | RX- |
| 9 | RX+ |
| 10 | GND |

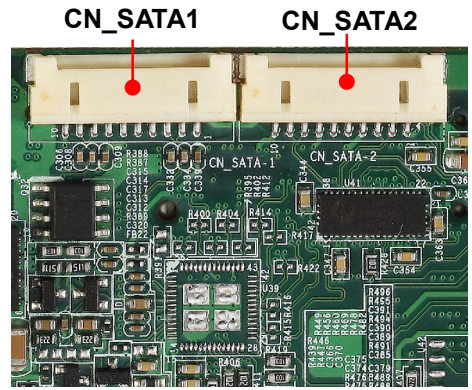

CN_SATA1/2




10 1

2.4.2 <Ethernet interface>

The board provide I210-AT Gigabit Ethernet which supports WOL on rear I/O.


Find the setting from

Advanced-----> Power Management--> Wake on LAN Enable [Disable] (default)

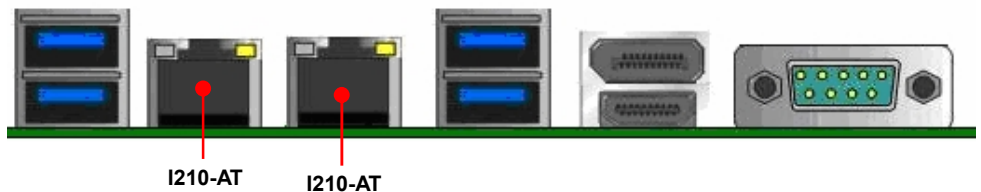

2.4.3 <Display interface>

Based on the Braswell SoC with built-in HD Graphics, the DisplayPort up to **3840x2160 @ 30Hz** on rear I/O. About the internal Display, the HDMI resolution up to **3840x2160 @ 30Hz** and LVDS (PTN3460) up to **1920x1200 @ 60Hz** support 18/24-bit color depth and single/dual channel. About select LCD Panel Type in BIOS, please refer **Appendix B**. The built-in HD Graphics support triple display function with clone mode and extended mode.

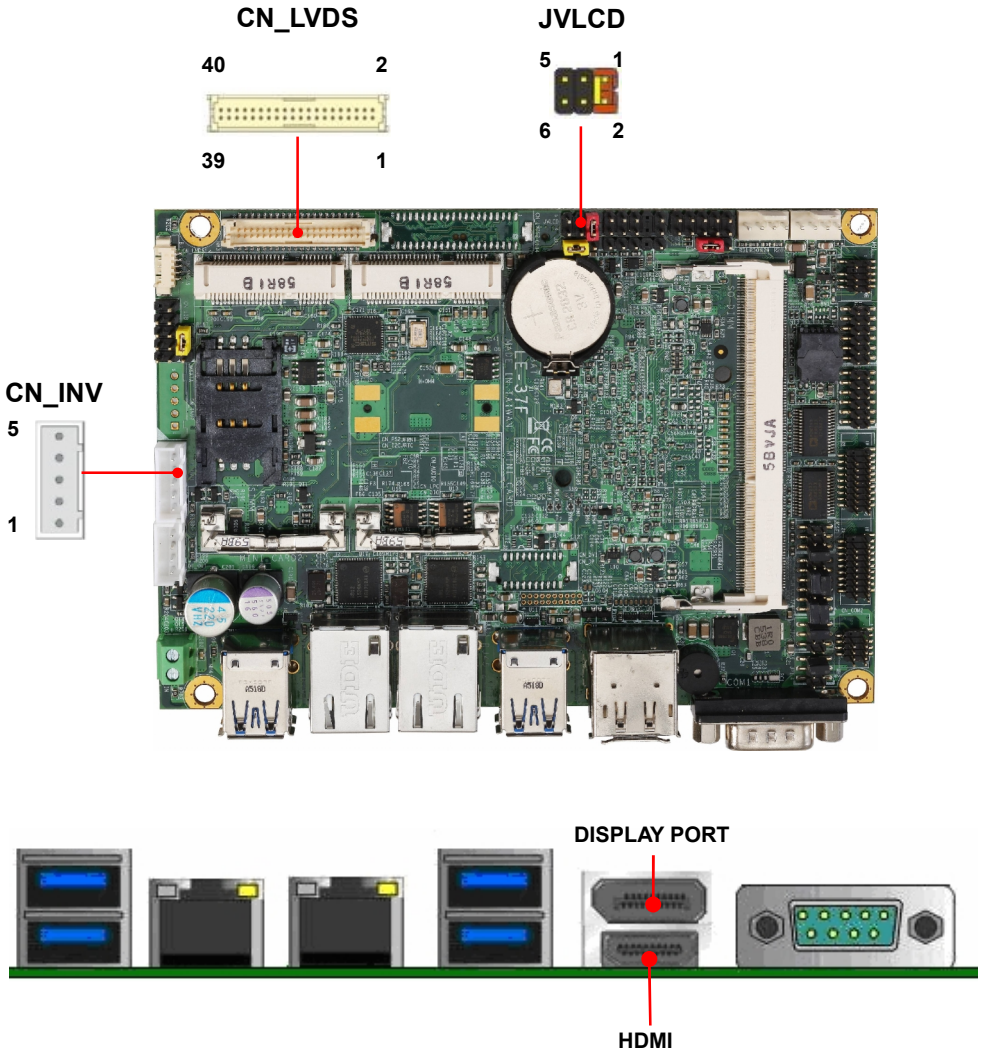

JVLCD: LVDS panel power select jumper

| Jumper settings | Function |
|-----------------|----------------|
| 1-2 | 3.3V (Default) |
| 2-3 | 5V |
| 5-6 | 12V |

Effective patterns of connection: 1-2 / 3-4 / 5-6
 Other may cause damage

CN_LVDS: LVDS 40-pin connector (Model: HIROSE DF13-40DP-1.25V compatible)


| Pin | Signal | Pin | Signal |
|-----|---------------------|-----|--------------|
| 2 | Set by JVLCD | 1 | Set by JVLCD |
| 4 | Detect (Active low) | 3 | GND |
| 6 | A_LVDS_0- | 5 | B_LVDS_0- |
| 8 | A_LVDS_0+ | 7 | B_LVDS_0+ |
| 10 | GND | 9 | GND |
| 12 | A_LVDS_1- | 11 | B_LVDS_1- |
| 14 | A_LVDS_1+ | 13 | B_LVDS_1+ |
| 16 | GND | 15 | GND |
| 18 | A_LVDS_2- | 17 | B_LVDS_2- |
| 20 | A_LVDS_2+ | 19 | B_LVDS_2+ |
| 22 | GND | 21 | GND |
| 24 | A_LVDS_CLK- | 23 | B_LVDS_3- |
| 26 | A_LVDS_CLK+ | 25 | B_LVDS_3+ |
| 28 | GND | 27 | GND |
| 30 | A_LVDS_3- | 29 | B_LVDS_CLK- |
| 32 | A_LVDS_3+ | 31 | B_LVDS_CLK+ |
| 34 | GND | 33 | GND |
| 36 | LVDS_DDCSCL | 35 | NC |
| 38 | LVDS_DDCSDA | 37 | NC |
| 40 | NC | 39 | NC |

Pin4 only need to be connected to GND

CN_INV: LVDS 5-pin Backlight power connector

| Pin | Signal |
|-----|-------------------|
| 1 | 12V |
| 2 | Backlight Control |
| 3 | GND |
| 4 | GND |
| 5 | Enable Backlight |

2.4.4 <Serial Port interface>

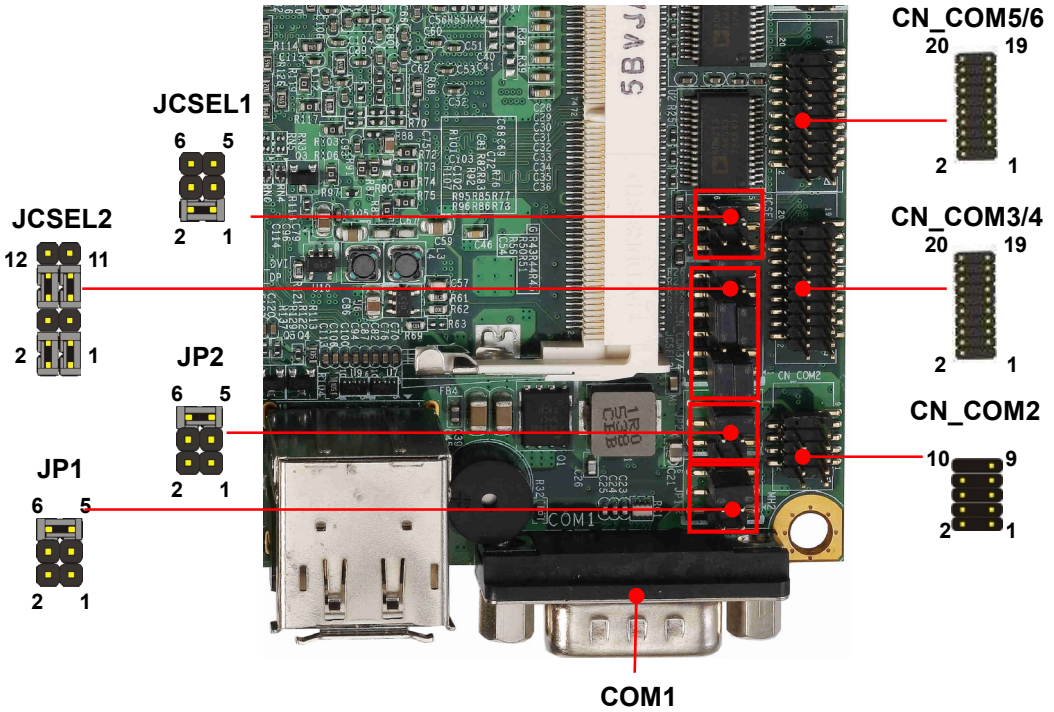

COM1: RS232 DB9 connector

| Pin | Signal | Pin | Signal |
|-----|------------|-----|--------|
| 1 | DCD | 2 | RXD |
| 3 | TXD | 4 | DTR |
| 5 | GND | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | Set by JP1 | 10 | Key |

CN_COM2: RS232/422/485 10-pin header (Pitch 1.27mm x 2.54mm)

| Pin | Signal | Pin | Signal |
|-----|-------------------|-----|-------------------|
| 1 | DCD/ 422TX-/ 485- | 2 | RXD/ 422TX+/ 485+ |
| 3 | TXD/ 422RX+ | 4 | DTR/ 422RX- |
| 5 | GND | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | Set by JP2 | 10 | Key |

Note: Use JCSEL1 and JCSEL2 to select communication mode

CN_COM3/4,5/6: RS232 20-pin header (Pitch 1.27mm x 2.54mm)

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | DCD1 | 2 | RXD1 |
| 3 | TXD1 | 4 | DTR1 |
| 5 | GND | 6 | DSR1 |
| 7 | RTS1 | 8 | CTS1 |
| 9 | RI1 | 10 | NC |
| 11 | DCD2 | 12 | RXD2 |
| 13 | TXD2 | 14 | DTR2 |
| 15 | GND | 16 | DSR2 |
| 17 | RTS2 | 18 | CTS2 |
| 19 | RI2 | 20 | Key |

JP1, JP2: COM1, COM2 pin-9 setting

| Jumper settings | Function |
|-----------------|--------------|
| 1-2 | 5V |
| 3-4 | 12V |
| 5-6 | RI (Default) |


Effective patterns of connection: 1-2 / 3-4 / 5-6

Other may cause damage

JCSEL1, JCSEL2: For configure COM2 communication mode

| Function | JCSEL1 | JCSEL2 |
|----------|--------|--------|
| RS232 | | |
| RS485 | | |
| RS422 | | |

2.4.5 <USB interface>

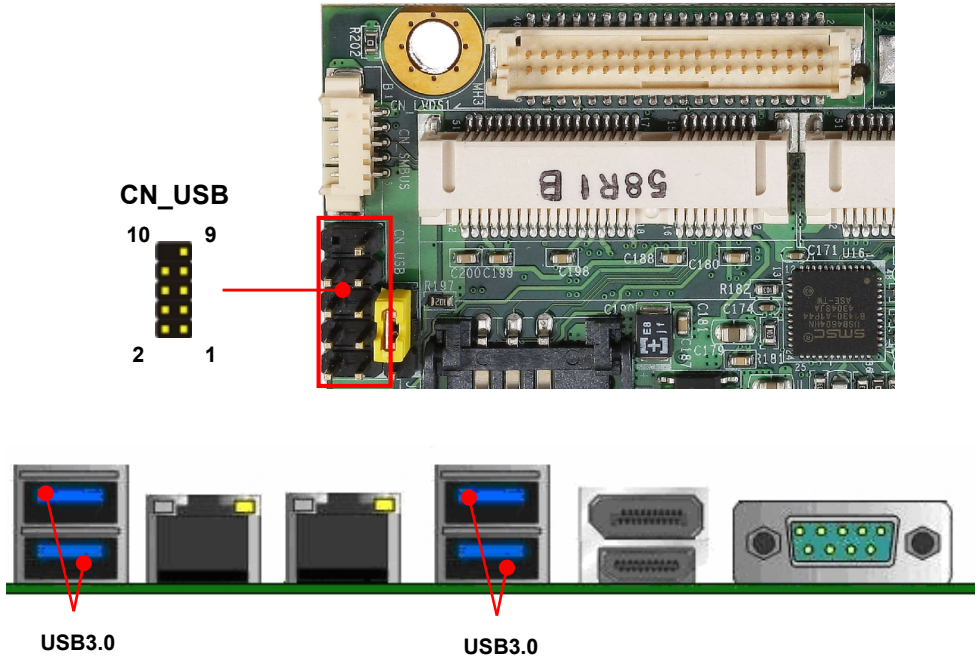


CN_USB: Front panel USB2.0 10-pin header (Pitch 2.54mm)

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | 5VSB | 2 | 5VSB |
| 3 | DATA0- | 4 | DATA1- |
| 5 | DATA0+ | 6 | DATA1+ |
| 7 | GND | 8 | GND |
| 9 | GND | 10 | Key |

Install USB3.0 Driver If you want to use CN_USB in Windows7.


2.4.6 <Audio interface>

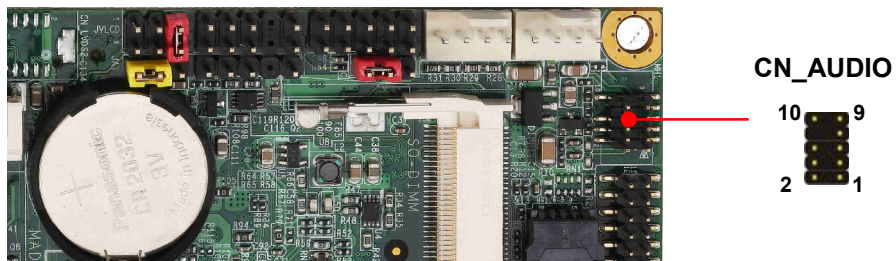

CN_AUDIO: Front panel audio 10-pin header (Pitch 1.27mm x 2.54mm)

| Pin | Signal | Pin | Signal |
|-----|----------|-----|---------------|
| 1 | MIC_L | 2 | GND |
| 3 | MIC_R | 4 | NC |
| 5 | FP_OUT_R | 6 | MIC_DETECT |
| 7 | SENSE | 8 | Key |
| 9 | FP_OUT_L | 10 | FP_OUT_DETECT |

2.4.7 <Expansion slot>

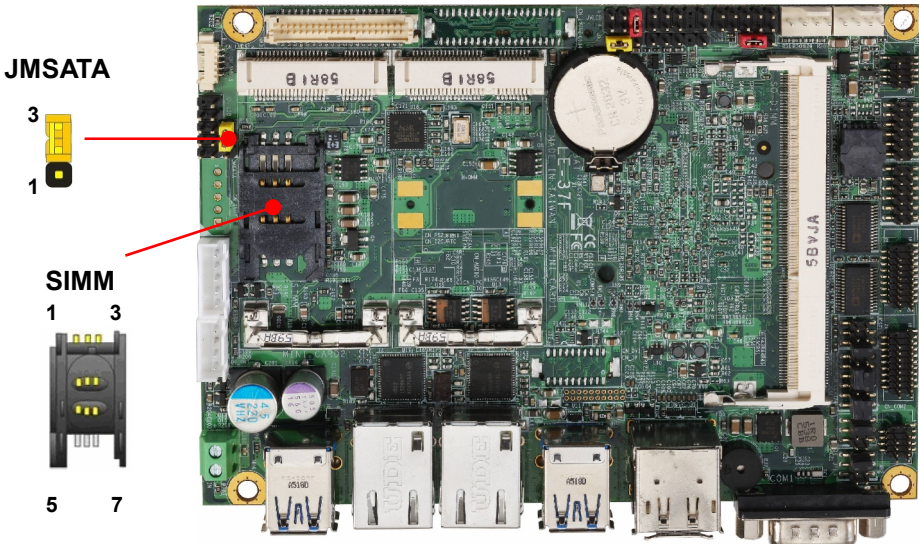

MINI_CARD1 support mSATA by JMSATA

MINI_CARD2 connect SIM card with 3G module.


JMSATA: Setting MINI_CARD1 to support PCIe/Msata

| Jumper settings | Function |
|-----------------|----------------------------|
| 1-2 | Support mSATA |
| 2-3 | Normal operation (Default) |

(CN_SATA2 cannot use when Minicard1 change to mSATA)

SIMM: (3G MiniPcie Mode)

| Pin | Signal | Pin | Signal |
|-----|---------|-----|--------|
| 1 | SIMVCC | 2 | SIMRST |
| 3 | SIMCLK | 4 | NC |
| 5 | GND | 6 | SIMVPP |
| 7 | SIMDATA | | |

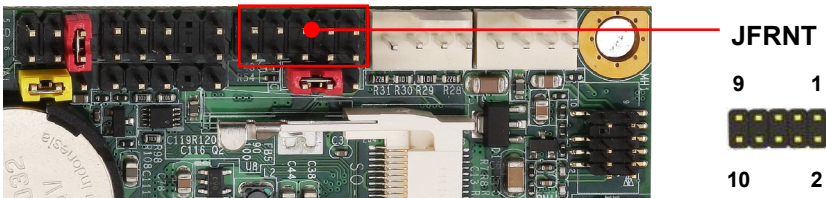2.4.8 <Front panel switch and indicator>


JFRNT: Front panel switch and indicator 10-pin header (Pitch 2.54mm)

| Pin | Signal | Pin | Signal |
|-----|------------|-----|------------|
| 1 | Power_ON- | 2 | Power_ON+ |
| 3 | Speaker- | 4 | Speaker+ |
| 5 | HDD_LED- | 6 | HDD_LED+ |
| 7 | Power_LED- | 8 | Power_LED+ |
| 9 | Reset+ | 10 | Reset- |

2.4.9 <GPIO ,SMBUS and Other Interface>


The board provides a programmable 8-bit digital I/O interface; you can use this general purpose I/O port for system control like POS or KIOSK. The GPIO is an **Open-drain output** and **TTL-level input**.

1. Output : **Open-drain**, Most applications **need use an external pull-up resistor**.
2. Input : **TTL-level**.

DC characteristics:

| 5V TTL-level Input Pin | | | | | | |
|------------------------------|----------|-----|-----|-----|---------|-----------------|
| Parameter | Sym | Min | Typ | Max | Unit | Conditions |
| Input Low Threshold Voltage | V_{t-} | 0.5 | 0.8 | 1.1 | V | $V_{CC} = 3.3V$ |
| Input High Threshold Voltage | V_{t+} | 1.6 | 2.0 | 2.4 | V | $V_{CC} = 3.3V$ |
| Hystersis | V_{TH} | 0.5 | 1.2 | | V | $V_{CC} = 3.3V$ |
| Input High Leakage | I_{LH} | | | +10 | μA | $V_{IN} = 3.3V$ |
| Input Low Leakage | I_{Ll} | | | -10 | μA | $V_{IN} = 0V$ |

| Open-drain output pin with 12-mA sink capability | | | | | | |
|--|----------|--|--|-----|---|-------------------------|
| Output Low Voltage | V_{OL} | | | 0.4 | V | $I_{OL} = 12\text{ mA}$ |

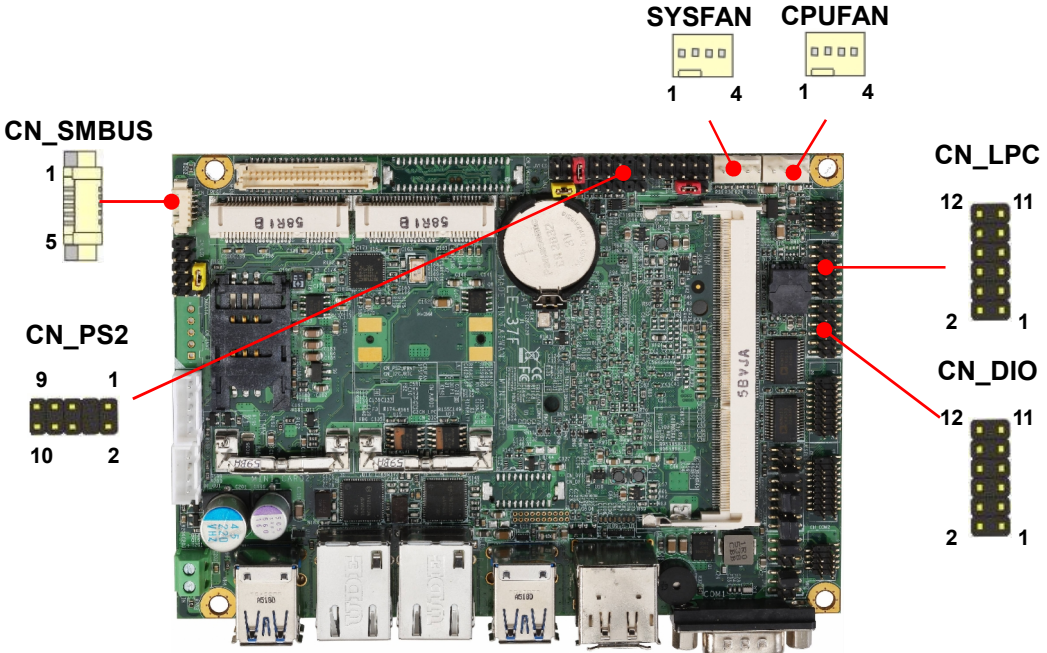

CN_LPC: LPC 12-pin header (Pitch 2.00mm)

| Pin | Signal | Pin | Signal |
|-----|---------|-----|--------|
| 1 | CLK | 2 | RST |
| 3 | -LFRAME | 4 | LAD3 |
| 5 | LAD2 | 6 | LAD1 |
| 7 | LAD0 | 8 | 3.3V |
| 9 | SERIRQ | 10 | GND |
| 11 | 3.3VSB | 12 | NC |

CN_DIO: GPIO 12-pin header (Pitch 2.00mm)

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | GND | 2 | GND |
| 3 | GPIO0 | 4 | GPIO4 |
| 5 | GPIO1 | 6 | GPIO5 |
| 7 | GPIO2 | 8 | GPIO6 |
| 9 | GPIO3 | 10 | GPIO7 |
| 11 | 5V | 12 | 12V |

CN_SMBUS: SMBus 5-pin connector

| Pin | Signal |
|-----|--------|
| 1 | 5V |
| 2 | NC |
| 3 | SMBDAT |
| 4 | SMBCLK |
| 5 | GND |

CN_PS/2: PS/2 10-pin header (Pitch 2.54mm)

| Pin | Signal | Pin | Signal |
|-----|---------|-----|--------|
| 1 | KB_DATA | 2 | M_DATA |
| 3 | NC | 4 | NC |
| 5 | GND | 6 | GND |
| 7 | VCC | 8 | VCC |
| 9 | KB_CLK | 10 | M_CLK |

CPUFAN: CPU cooler fan 4-pin connector


| Pin | 1 | 2 | 3 | 4 |
|--------|-----|-----|--------|---------|
| Signal | GND | 12V | Sensor | Control |

SYSFAN: System cooler fan 4-pin connector

| Pin | 1 | 2 | 3 | 4 |
|--------|-----|-----|--------|---------|
| Signal | GND | 12V | Sensor | Control |

2.5 <Power supply>

2.5.1 <Power input>

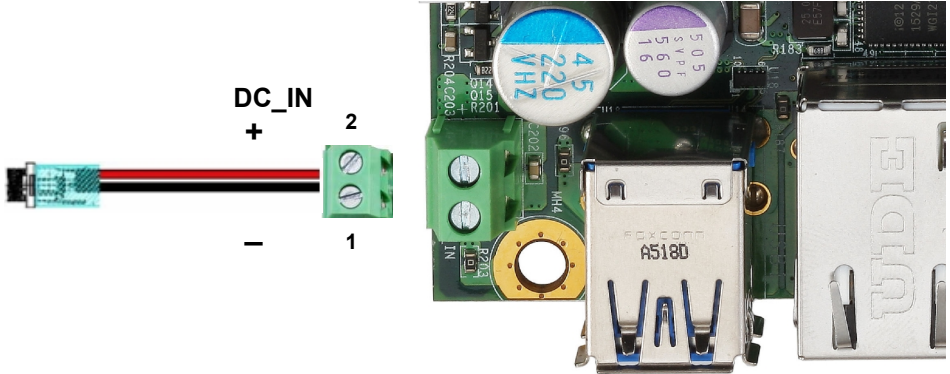

DC_IN: Terminal Block 2-pin power connector


| Pin | Signal | Pin | Signal |
|-----|--------|-----|----------|
| 1 | GND | 2 | Power in |

The power support 6~30V wide voltage input.

2.5.2 <Power output>

DC_OUT: SATA power 4-pin connector

| Pin | Signal |
|-----|--------|
| 1 | 12V |
| 2 | GND |
| 3 | GND |
| 4 | 5V |

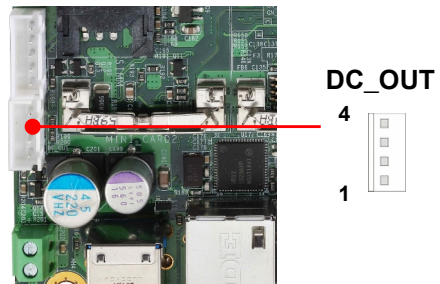

Appendix A <Flash BIOS>


A.1 BIOS Auto Flash Tool

The board is based on Phoenix BIOS and can be updated easily by the BIOS auto flash tool. You can download the tool online at the address below:

[LE-37F reflash tool](#)

A.2 Flash Method

1. Extract the zip file(re-flash tool and BIOS file) to root of the USB flash drive.
2. Insert your USB flash drive in USB port of the board and power on the system.
3. Boot to EFI-Shell mode (**UEFI Boot Enable, Legacy Boot Disable**)

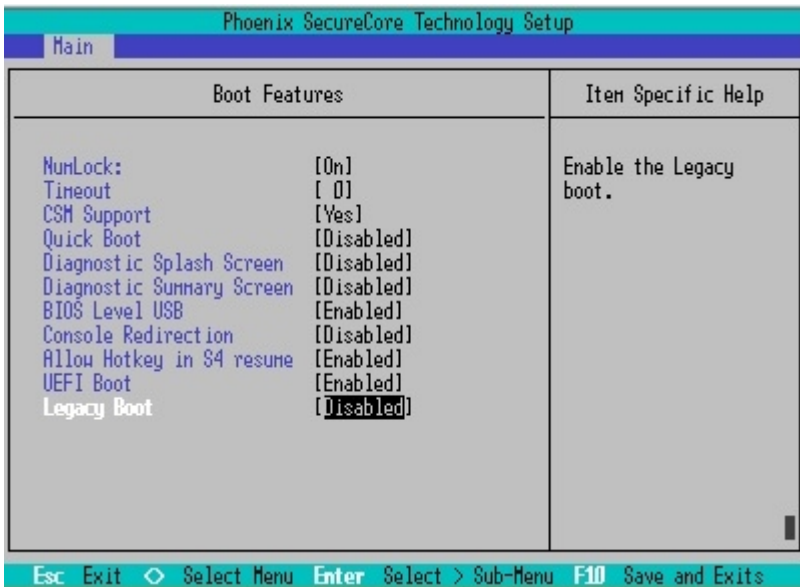

then input the “**fs0:**” command to switch to the root of the USB flash drive.

```
InitialDevice mapping tableAgent GE v1.4.02
fs0 :Renovable HardDisk - Alias hd2310b blk0
      Acpi(PNPDR03,D)/Pci(1410)/Usb(8,D)/HD(Part1,Sig002B4588)
blk0 :Renovable HardDisk - Alias hd2310b fs0
      Acpi(PNPDR03,D)/Pci(1410)/Usb(8,D)/HD(Part1,Sig002B4588)
blk1 :Renovable BlockDevice - Alias (no11)
      Acpi(PNPDR03,D)/Pci(1410)/Usb(8,D)

Press ESC in 1 seconds to skip startup.nsh, any other key to continue.

Shell> fs0:
fs0:\> fpt64.efi -y -f xxxxx.bin
```

4. Type the " **fpt64.efi -y -f xxxxx.bin**" command to start flash BIOS processes. (xxx.bin means the BIOS file that you want to update)
5. When it finished all update processes, restart the system.

Any question about the BIOS re-flash please contact your distributors or visit the web-site at below:

http://www.commell.com.tw/contact/contact_info.htm

Appendix B <LCD Panel Type select>

According your panel, it need to select the correct resolution in the BIOS. If there is no fit your panel type, please feedback for us to make OEM model.

Find the setting from

Advanced-----> Uncore Configuration----->LCD Panel Type

| BIOS panel type selection form (BIOS Version:1.0) | | | |
|---|----------------------------------|-----------------------|-------------|
| Single / Dual channel | | Single / Dual channel | |
| NO. | Type | NO. | Type |
| 1 | Auto | 9 | 1366 x 768 |
| 2 | 640 x 480 | 10 | 1680 x 1050 |
| 3 | 800 x 600 | 11 | 1920 x 1200 |
| 4 | 1024 x 768 | 12 | 1400 x 900 |
| 5 | 1280 x 1024 | 13 | 1600 x 900 |
| 6 | 1400 x 1050 Reduced Blanking | 14 | 1024 x 768 |
| 7 | 1400 x 1050 non-Reduced Blanking | 15 | 1280 x 800 |
| 8 | 1600 x 1200 | 16 | 1920 x 1080 |
| | | 17 | OEM keep |

Appendix C <Programmable Watch Dog Timer>

Timeout value range

1 to 255 Minute and Second

Program sample

Watchdog timer setup as system reset with 5 second of timeout

```
-o 4E 87      ;enter configuration
-o 4E 87
-o 4E 07
-o 4F 08      ;select Logical Device
-o 4E 30
-o 4F 01      ; activate WDTO# function
-o 4E F0
-o 4F 00      ;set "00" is second mode, set "08" is minute mode
-o 4E F1
-o 4F 05      ;00h: Timeout Disable
                ;01h: Timeout occurs after 1 minute only
                ;02h: Timeout occurs after 2 second/minute
                ;03h: Timeout occurs after 3 second/minute
                ;
                ;FFh: Timeout occurs after 255 second/minute
                (The deviation is approx 1 second.)
```

For further information, please refer to Nuvoton NCT6106D datasheet

Appendix D <Programmable GPIO >

The GPIO' can be programmed with the MS-DOS debug program using simple IN/OUT commands.

| | | | | | | | | |
|-------------|---|---|---|---|---|---|---|---|
| GPIO | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| bit | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |

- o 4E 87 ;enter configuration
- o 4E 87
- o 4E 07
- o 4F 07 ;select Logical Device
- o 4E 30
- o 4F 10 ;activate GPIO function (The board use GPIO4)
- o 4E F0
- o 4F XX ;set "01" GPIO as input, set "00" GPIO as output
- o 4E F1
- o 4F XX ;if set GPIO as output, this register's value can be set "00~ FF"

Optional

- o 4E F2
- o 4F XX ;set "01", the respective bit are inverted (Both input and output)
- ;set "00", the respective bit are normal

For further information, please refer to Nuvoton NCT6106D datasheet

Appendix E <Setup ADP-3355>

LE-37FNXIT and LE-37FEXIT series has a CRT, it's no need install extra driver. Here is ADP-3355 Setup manual [Link](#)

Contact information

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business.

Taiwan Commate computer Inc.

| | |
|----------------|--|
| Address | 19F., NO.94, Sec. 1, Xintai 5 th Rd., Xizhi Dist., New Taipei City 22102, Taiwan. |
| TEL | +886-2-26963909 |
| FAX | +886-2-26963911 |
| Website | www.commell.com.tw |
| E-mail | info@commell.com.tw (General information) tech@commell.com.tw (Technical Support) |

Commell is a brand name of Taiwan Commate computer Inc.